



*Variant Mx-i26B supports MOBOTIX MxBus modules




i26 Standard Delivery



Item	Count	Part Name
1.1	1	Housing (installed)
1.2	1	Back cover (installed)
1.3	1	Main board with lens MX-B016 or MX-B036 (installed)
1.4	2	Bayonet catch, blue (installed)
1.5	1	USB plug, blue (installed)
1.6	1	Ethernet plug, blue (installed)
1.7	1	Ethernet patch cable, 50 cm/19.7 in, black
1.8	1	Wall sealing
1.9	2	Screw plug, white
1.10	2	Washer Ø 4.3 mm, stainless steel
1.11	2	Wood screw 4x40 mm, stainless steel
1.12	2	Screw anchor S6
1.13	1	MicroSD card pre-installed (SDHC installed, SDXC supported)
1.14	1	Allen wrench 2.5 mm

Standard Delivery i26 In-Wall Installation Set (Accessory)

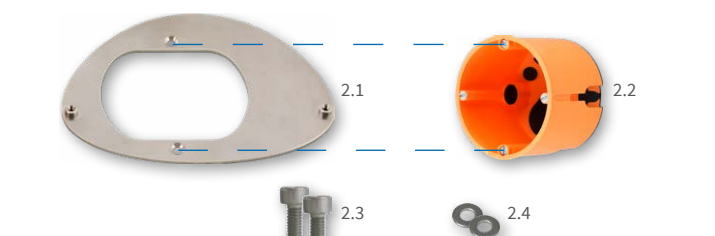

Item	Count	Part Name
2.1	1	Mounting plate, stainless steel
2.2	1	Cavity wall socket
2.3	2	Allen screw M4x8 mm, stainless steel
2.4	2	Washer Ø 4.3 mm, stainless steel

Standard Delivery i26 On-Wall Installation Set (Accessory)



Item	Count	Part Name
3.1	1	On-Wall Installation Set
3.2	2	Wood screw 4x70 mm, stainless steel

Connection and Initial Operation of the i26



You can find detailed information on the **installation** and **connections** of the i26 in the Q25 Camera Manual (PDF, available on www.mobotix.com > **Support** > **Download Center** > **Documentation** > **Manuals**).

Please note that the boot options of this camera have changed compared to its predecessor (see «Boot Options of the i26» on page 2) and the camera only has one key. Regarding the rest of the **initial operation** of the i26, please see the Q25 Camera Manual in Chapter 3, «Initial Operation». Use a suitable device for operating the camera key (e.g., an opened paper clip).

Inserting/Exchanging the SD Card

All camera models can use the integrated MicroSD card (SDXC) to record video data. In order to exchange the MicroSD card, please proceed as outlined in the following instruction. For information on reliable SD cards, please see the MOBOTIX website www.mobotix.com > **Support** > **Download Center** > **Documentation** > **White Lists** in the document MicroSD Card Whitelist for MOBOTIX Cameras.

Caution: In order to avoid damage from electrostatic discharge, you should touch a grounded device before opening the housing of the camera (e.g., the blank metal at the back of a computer). This will remove any static electricity that may have built up.

1. Remove the cables on the back

Release the blue bayonet catch, then remove the patch cable.
If a USB cable is attached, remove this cable in the same way.
Lay aside the wall sealing of the camera.




2. Remove the back cover

Insert a suitable device into the hole at the top of the back cover as shown until you feel resistance.
In order to release the back cover, **cautiously** press upward as indicated by the blue arrow. If you are using a flat-head screwdriver, simply turn the screwdriver.




Gently pull the back cover a bit backward **1**, then lift the back cover upward to remove it **2**.

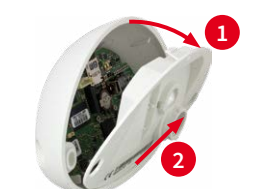

3. Remove the main board

Release the main board by **gently** pressing the snap-fit hook beneath the main board as indicated by the red arrow.

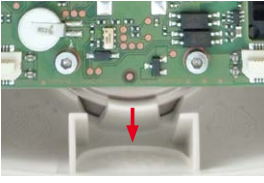


Push the main board out of the housing by gently applying pressure onto the lens holder (push upward, since the main board is tilted downward 15 degrees).
Take care that the lens holder does not catch in the tunnel or the snap-fit hook.



4. Remove/insert SD card

If a MicroSD card has been installed, gently press with your finger as indicated by the arrow until you hear a **click**. Then release the SD card. The card is protruding slightly and can be easily removed.
Insert the new MicroSD card and gently press with your finger as indicated by the arrow until you hear the **click**.

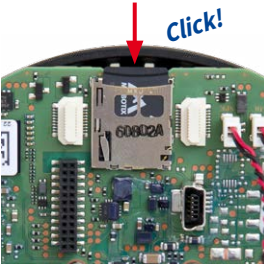


5. Insert the main board

Insert the lens into the tunnel of the housing as shown.
Caution: If the audio package has been installed, make sure that you do not damage the speaker cable.



6. Insert the back cover

Insert the back cover at the bottom **1**, then push shut at the top **2** and press until it clicks into place.

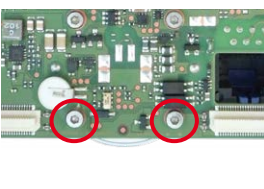


7. Re-connect the cables

Press the wall sealing onto the back of the i26 and make sure that it lies flat all around the rim. Note that the labels of the sealing are pointing toward the back of the camera.
Insert the Ethernet cable and – if installed – the USB cable into the corresponding sockets and secure the connectors using the blue bayonet catches.



Installing the Mx-A-IOA-IC

For the Mx-i26A/B, you can use the optionally available Mx-A-IOA-IC to attach external sensors using the signal inputs and to switch other devices via the signal outputs. When used with the the Mx-i26B, you can also attach MxBus devices (e.g., an AX-GPS-Box).

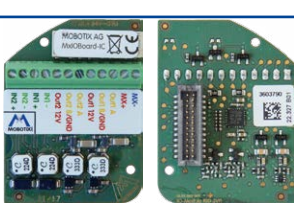

1. Insert the Mx-A-IOA-IC

On the back of the camera, remove the sticker that protects the receptacle and the camera's interior from collecting dirt (see red arrow in figure to the right).



Carefully push the module board onto the receptacle. Secure the module board using the supplied Phillips screw (see red arrow in figure).



When attaching the connection wires to the Mx-A-IOA-IC, make sure the wires are guided to the module without tension (you could apply a cable tie and tie the wires to the network cable, for example).



2. Attach the connection cables

Attach the connection wires as shown in the terminal connector overview.

Terminal Connectors			
MX- MX+ Out1 A Out1 B /GND Out1 12V Out2 A Out2 B/GND Out2 12V IN1 - IN1 + IN2 - IN2 +	MxBus connectors		MxBus functionality is only supported by the camera variant Mx-i26B.
	Output 1 A	Relay pot.-free	Output 1 12 V
	Output 1 B/GND	Relay pot.-free	Output 2 12 V
	Output 1 12 V	Relay pot.-free	Output 2 12 V
	Output 2 A	Relay pot.-free	Output 2 12 V
	Output 2 B/GND	Relay pot.-free	Output 2 12 V
	Output 2 12 V	Relay pot.-free	Output 2 12 V
	Input 1 -	Relay pot.-free	Output 2 12 V
	Input 1 +	Relay pot.-free	Output 2 12 V
	Input 2 -	Relay pot.-free	Output 2 12 V
	Input 2 +	Relay pot.-free	Output 2 12 V

Installation Without In-Wall Installation Set

Use the drilling template on the back for this step. Mark the holes for dowels or screws (blue) and the cut-out for the cables (red). If required, drill the holes for the dowels, push them in and cut the cut-out for the cables. Guide the Ethernet cable and any other cables that are to be connected through the cut-out.

1. Press wall sealing on i26

Press the wall sealing on the back of the i26 and make sure that it lies flat all around the rim. Note that the labels of the sealing are pointing toward the back of the camera.




2. Connect the cables

Insert the cables into the appropriate connectors and fasten them using the blue bayonet catches.



3. Install the i26

Press the camera and the wall sealing against the wall and align the sealing with the holes for the dowels or screws. Insert the screws with washers and tighten them cautiously.

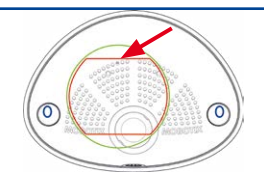

4. Apply screw plugs

Push the screw plugs to close off the holes with the screws. When doing so, make sure that the notches in the plugs follow the guides.




Installation With In-Wall Installation Set (Accessory)

With this type of installation, the mounting plate of the In-Wall Installation Set is screwed onto a cavity wall socket. The i26 itself is screwed onto the mounting plate using Allen screws. There is no drilling for dowels or screws required.

1. Cut out the hole for the cavity wall socket

Mark the hole for the cavity wall socket (green circle on drilling template) and cut out the hole.

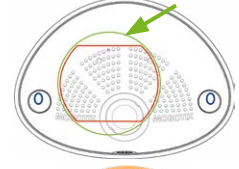

2. Insert the cavity wall socket

Insert the cavity wall socket and tighten the two screws (red arrows) in order to fasten the socket in the wall.




3. Remove the screws

Remove the two screws in the cavity wall socket (red arrows), which are otherwise used for fastening switches etc.



4. Attach the mounting plate

Use the two screws you just removed to fasten the mounting plate onto the cavity wall socket.

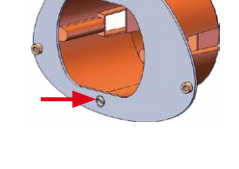

5. Press wall sealing on i26

Press the wall sealing onto the back of the i26 and make sure that it lies flat all around the rim. Note that the labels of the sealing are pointing toward the back of the camera.




6. Connect the cables

Guide the cables of the camera from behind through the cavity wall socket. Insert the Ethernet cable and – if installed – the USB cable into the corresponding sockets. Secure the connectors using the blue bayonet catches.



7. Install the i26

Push the remaining cable into the cavity wall socket, then press the camera and the wall sealing onto the mounting plate. Use the two Allen screws with the washers to fasten the i26 onto the mounting plate (0.4 Nm).

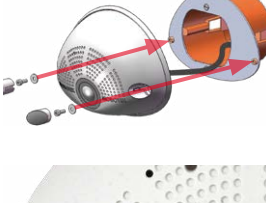

8. Apply screw plugs

Push in the screw plugs to close off the holes with the screws. When doing so, make sure that the notches in the plugs follow the guides.



Initial Operation of the i26

The initial operation starts with connecting the power supply (see section «Network and Power Connection, Additional Cables» in the Q25 Camera Manual). The first access follows the procedure described in the same manual in the section «Initial Operation of the Camera». All other tasks require access to the camera's user interface in the browser. Enter the camera's IP address into the address bar of the browser (user "admin", password "meinsm"; password must be changed upon first login – camera software V5.1.x and higher).




1. Configuring and Using the Mx-A-IOA-IC

The camera will automatically detect an installed Mx-A-IOA-IC (see **Camera Status, System** section in browser).

The signal inputs can be used right away in the **signal input profiles** in the **Setup Menu > Event Overview**. Likewise, the signal outputs can be used in the **signal output profiles** in **Admin Menu > Hardware Configuration > Signal Out Profiles**.

In addition, the signal inputs/outputs have been entered automatically in the **Admin Menu > Assign Wires** dialog and can be used to control doors and lights.

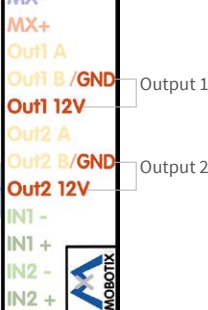

To use one or both signal outputs not as potential-free outputs (for relays), but as **self-powered 12 V outputs**, open the **Admin Menu > Hardware Configuration > Manage Hardware Expansions** dialog. In the **MxBus/IO Board** section, click on **Connect** for each output you want to use as self-powered output.

2. Save the configuration

In the live image of the browser, select the **Manage Settings** quick control and set **Store Entire Configuration** as value. The camera stores the configuration in the permanent camera memory so that the settings will be applied at the next camera reboot.

Boot Options of the i26

By default, the camera starts as DHCP client and automatically tries to get an IP address from a DHCP server. To start the camera in a mode different from the default mode, you can activate the boot menu of the camera.

1. Prepare the Camera

- Disconnect the camera's power supply.
- Make sure that you have suitable item such as a paper clip at hand, **but never use sharp or pointed objects!**
- Reconnect the power supply of the camera.

2. Activate the Boot Menu

The red LED lights up 5 to 10 seconds after establishing the power supply and will stay on for 10 seconds. Briefly press the key by inserting the paper clip into the hole indicated by the red circle in the figure. The camera enters the boot menu, ready for selecting one of the boot options.



The LED now flashes once and repeats the flash signal after pausing for one second (the number of flashes indicates the current boot option). To go to the next boot option, briefly press the key again (< 1 sec). After the last boot option, the camera returns to the first option (LED flashes once).

Important Notes

Safety Warnings

Notes on Installing:

- This product must not be used in locations exposed to the dangers of explosion.
- Make sure that you install this product as outlined in the instructions of this Quick Install document. A faulty installation can damage the camera!
- When installing this product, make sure that you are only using genuine MOBOTIX parts and MOBOTIX connection cables.
- Only install this product on suitable, solid materials that provide for a sturdy installation of the fixing elements used.



Electrical installation: Electrical systems and equipment may only be installed, modified and maintained by a qualified electrician or under the direction and supervision of a qualified electrician in accordance with the applicable electrical guidelines. Make sure to properly set up all electrical connections.



Electrical surges: MOBOTIX cameras are protected against the effects of small electrical surges by numerous measures. These measures, however, cannot prevent the camera from being damaged when stronger electrical surges occur. Special care should be taken when installing the camera outside of buildings to ensure proper protection against **lightning**, since this also protects the building and the whole network infrastructure.



Max. power consumption of attached extension modules: The power consumption of all attached **MxBus modules** must **not exceed 2,5W**. When attaching modules to the MxBus connector and the USB socket, the **power consumption of all attached modules must not exceed 3W, if the camera is powered by PoE class 3**. If **PoE class 2** is used, **the power consumption of all attached modules must not exceed 1W!**



Never touch the lens: Due to the high performance of the i26, the area of the image sensor **can get quite hot**, especially when the ambient temperature is also high. This does not affect the proper functioning of the camera in any way. For this reason, the product must not be installed within the reach of persons.



Power off before opening the camera: Make sure the power supply to the camera is disconnected before opening the camera housing (e.g., when exchanging the SD card or when opening the body to attach wires).



Network security: MOBOTIX products include all of the necessary configuration options for operation in Ethernet networks in compliance with data protection laws. The operator is responsible for the data protection concept across the entire system. The basic settings required to prevent misuse can be configured in the software and are password-protected. This prevents unauthorized parties from accessing these settings.



Legal Notes

Legal aspects of video and sound recording: You must comply with all data protection regulations for video and sound monitoring when using MOBOTIX products. Depending on national laws and the installation location of the i26, the recording of video and sound data may be subject to special documentation or it may be prohibited. All users of MOBOTIX products are therefore required to familiarize themselves with all applicable regulations and to comply with these laws. MOBOTIX AG is not liable for any illegal use of its products.



Disposal

Electrical and electronic products contain many valuable materials. For this reason, we recommend that you dispose of MOBOTIX products at the end of their service life in accordance with all legal requirements and regulations (or deposit these products at a municipal collection center). MOBOTIX products must not be disposed of in household waste! If the product contains a battery, please dispose of the battery separately (the corresponding product manuals contain specific directions if the product contains a battery).



Disclaimer

MOBOTIX AG does not assume any responsibility for damages, which are the result of improper use or failure to comply to the manuals or the applicable rules and regulations. Our **General Terms and Conditions** apply. You can download the current version of the General Terms and Conditions from our website at **www.mobotix.com** by clicking on the **COS** link at the bottom of every page.



Technical Specifications i26

Model Variants	Mx-i26A/B*-6D016/036 (daylight image sensor, color)
	Mx-i26A/B*-6N016/036 (night image sensor, Black&White)
Lens Options	Mx-i26A/B*-AU-6D016/036 (audio package, daylight image sensor, color)
	Mx-i26A/B*-AU-6N016/036 (audio package, night image sensor, Black&White)
Sensitivity	*Variant Mx-i26B supports MOBOTIX MxBus modules
	B016 (180° horizontal image angle)
Image Sensor	B036 (103° horizontal image angle)
	Color sensor (daylight): 0.1 lx @ 1/60s; 0.005 lx @ 1s
Max. Image Size	Black&White sensor (night): 0.02 lx @ 1/60s; 0.001 lx @ 1s
	1/1.8" CMOS, 6MP (3072x2048), Progressive Scan
Image Formats	6MP (3072x2048)
	Freely configurable 4:3, 8:3, 16:9 or custom formats (image cropping), e.g., 2592x1944 (5MP), 2048x1536 (QXGA), 1920x1080 (Full-HD), 1280x960 (MEGA)
Max. Frame Rate	MxPEG: 42@HD(1280x720), 34@Full-HD, 24@QXGA, 15@5Mp, 12@6MP
	M-JPEG: 26@HD(1280x720), 13@Full-HD, 9@QXGA, 5@5Mp, 4@6MP
Video Codec	H.264: 25@Full-HD, 20@QXGA
	MxPEG, M-JPEG, JPEG (max. output size 6MP)
ONVIF	H.264 (max. output size QXGA, bandwidth limitation applicable)
	ONVIF-S (camera software V5.0.2.x and higher)
DVR	In the camera on MicroSD card (SDXC, SDHC pre-installed)
	External, on NAS
DVR	External, on USB device
	Separate live image and full image recording – MxFFS with archiving function
DVR	Pre- and post-alarm images
	Automatic DVR monitoring with error notification

Software	MxManagementCenter
Image Processing	MxLEO, backlight compensation, automatic white balance, distortion correction
PTZ	Digital pan/tilt/zoom, continuous up to 8X
Alarm/Events	Temperature sensor, shock detector (with firmware version 5.0.1 and higher), microphone (Mx-i26A/B-AU only), additional sensors/IOs via MxMessageSystem, notification via e-mail, FTP, IP telephony (VoIP, SIP)
Intelligent Video Analysis	MxActivitySensor, video motion analysis, MxAnalytics
Audio (only Mx-i26A/B-AU with audio package)	Microphone/speaker, both 16bit/16kHz (HD wideband audio)
Interfaces	Lip-synchronous audio, audio recording
Security	VoIP/SIP telephony, intercom, remote controlling using key codes
Certifications	Ethernet 100BaseT (MxRJ45), MiniUSB (MxMiniUSB) , MxBus*
Power Supply	*Only variant Mx-i26B
Power Consumption	User/group management, HTTPS/SSL, IP address filter, IEEE 802.1x, intrusion detection, digital image signature, MxFFS
Power Consumption of External Devices	EN55022:2010; EN55024:2010; EN55032:2012; EN50121-4:2015, EN61000-6-1:2007; EN 61000-6-2:2005, EN61000-6-3:2007+A1:2011, EN61000-6-4:2007+A1:2011, AS/ NZS CISPR22:2009+A1:2010, CFR47 FCC Part15B
Protection Classes	Power over Ethernet IEEE 802.3af
Ambient Temperature	Typ. 5W
Dimensions	At MxBus: max. 2.5W, at USB: max. 2.5W, total max. 3W
Weight	The power consumption of the camera will increase accordingly!
	IP30, IK06
	0 to 40 °C/32 to 104 °F
	Outside diameter 120 mm/4.72 in, total height 51 mm/2.01 in with B016, 56 mm/2.21 in with B036, height installed 15 mm/0.59 in with B016, 20 mm/0.79 in with B036, cut-out diameter 105 mm/4.13 in, rec. min. installation depth 55 mm/2.17 in
	Approx. 201 g

Dimensions/Drilling Template

